


GRIND™
WIRELESS

PAIR NEW DEVICE:




*OFF MODE

PAIRING MODE:

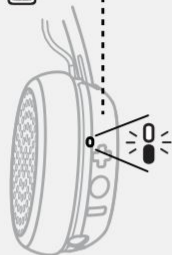

"GRIND WIRELESS"

POWER-ON/OFF:

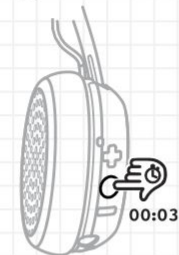


00:03

VOLUME UP:



1X

VOLUME DOWN:

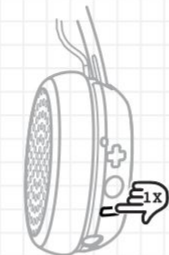


1X

PLAY/PAUSE




1X

TRACK FORWARD:

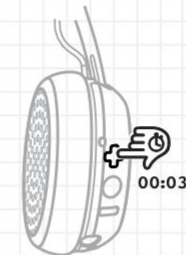


00:03

TRACK BACK:

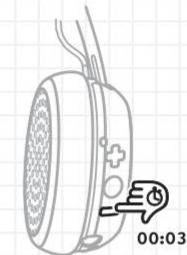


00:03

ANSWER/END:

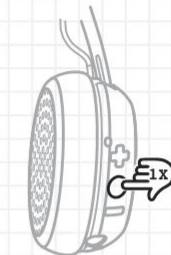

1X

CHARGE

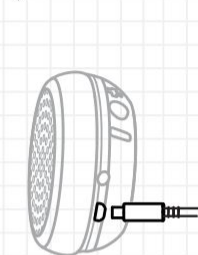

Skulcandy®

PAIR NEW DEVICE *Off mode

COUPLER NOUVEL APPAREIL*Mode off

VINCULAR NUEVO DISPOSITIVO*Modo apagado

ACCOPPIA NUOVO DISPOSITIVO*Modalità spento

EMPARELHAR NOVO DISPOSITIVO*Modo desligado

MIT NEUEM GERÄT KOPPELN*Ausgeschalteter Zustand

NIEUW APPARAAT PAREN*uitmodus

PARDAN NY ENHED*Slukket tilstand

MUODOSTA UUSI LAITEPARI*Off-tila

SAMMENKOBLE NY ENHET*Av-modus

PARA NY ENHET*Av-läge

СОПРЯЖЕНИЕ НОВОГО УСТРОЙСТВА*В выключенном режиме

配对新设备 *关机模式

新しいデバイスをペアリング *オフモード

'새 기기 짝 맞추기 *오프 모드

وضع إرفاق مزوجة جهاز جديد.

PAIRING MODE

MODE COUPLAGE

MODO DE VINCULACIÓN

MODALITÀ DI ACCOPIAMENTO

MODO EMPARELHAMENTO

KOPPELMOEUS

PAARMODUS

PARDANNELSEVSTILSTAND

LAITEPARIN MUODOSTUSTA

SAMMENKOBLEINGSMODUS

PARNINGSLÄGE

РЕЖИМ СОПРЯЖЕНИЯ

配对模式

ペアリングモード

페어링 모드

وضع المزوجة

POWER-ON/OFF

ON/OFF

ENCENDIDO/APAGADO

ACCENSIONE/SPEGNIMENTO

LIGAR/DESLIGAR

EIN/AUS

AAN-/UITZETTING

TÆND/SLUK FOR STRØM

VIRTA PÄÄLE/POIS

STRØM AV/PÅ

ÖKA VOLYMEN

ВКЛЮЧИТЬ/ВЫКЛЮЧИТЬ ПИТАНИЕ

开机/关机

電源 - ON/OFF

진원 켜기/끄기

تشغيل إيقاف تشغيل

VOLUME UP

VOLUME +

SUBIR VOLUMEN

AUMENTO VOLUME

AUMENTAR O VOLUME

LAUTSTÄRKE ERHÖHEN

VOLUME OMHOOG

SKRU OP FOR LYDSTYRKEN

ÄÄNENVOIMAKKUUDEN LISÄYS

VOLUM OPP

ÖKA VOLYMEN

УВЕЛИЧЕНИЕ ГРОМКОСТИ

音量增大

音량을上げる

볼륨 높이기

رفع مستوى الصوت

VOLUME DOWN

VOLUME -

BAJAR VOLUMEN

RIDUZIONE VOLUME

DIMINUIR O VOLUME

LAUTSTÄRKE SENKEN

VOLUME OMLAAG

SKRU NED FOR LYDSTYRKEN

ÄÄNENVOIMAKKUUDEN VÄHENNYS

VOLUM NED

УМЕНЬШЕНИЕ ГРОМКОСТИ

音量减小

音량을lower

볼륨 낮추기

خفض مستوى الصوت

PLAY/PAUSE

LECTURE/PAUSE

REPRODUCIR/PAUSAR

RIPRODUCI/PAUSA

REPRODUZIR/COLOCAR EM PAUSA

WIEDERGABE/PAUSE

AFSPELEN/PAUZEREN

AFSPIL/PAUSE

TOISTO/TAUKO

SPILL/PAUSE

SPELA UPP/PAUSA

ВОСПРОИЗВЕДЕНИЕ/ПАУЗА

播放/暂停

再生 / 一時停止

재생/일시 정지

تشغيل إيقاف مؤقت

TRACK FORWARD

PISTE SUIVANTE

ADELANSTAR

BRANO SUCCESSIVO

FAIXA SEGUINTE

NÄCHSTER TITEL

VOLGEND NUMMER

SKIPT TIL NÆSTE MUSIKNUMMER

KELAUS ETEENPÄIN

NESTE SPOR

NÄSTA LJUDSPÅR

ПЕРЕКЛЮЧЕНИЕ НА 1 ТРЕК ВПЕРЕД

下一曲目

次のトラックを再生する

다음 트랙으로

مسار إلى الأمام

TRACK BACK

PISTE PRÉCÉDENTE

RETROCEDER

BRANO PRECEDENTE

FAIXA ANTERIOR

VORANGEHENDER TITEL

VORIG NUMMER

MUSIKNUMMER TILBAGE

KELAUS TAKSEPÄIN

FÖRRIIGE SPOR

BYTA TILL FÖREGÅENDE SPÅR

ПЕРЕКЛЮЧЕНИЕ НА 1 ТРЕК НАЗАД

上一曲目

前のトラックを再生する

이전 트랙으로

مسار إلى الخلف

ANSWER/END

RÉPONDRE/FIN

RESPONDER/COLGAR

RISPOSTA/FINE

ATENDER/DESLIGAR

ANNEHMEN/BEENDEN

BEANTWOORDEN/BEEÏNDIGEN

BESVAR/AFSLUT

VASTAUS/LOPETUS

SVAR/AVSLUTT

SVARA/LÄGG PÅ

ОТВЕТИТЬ/ЗАКОНЧИТЬ

接听/结束

응답 / 종료

전화 받기/끊기

رد الإجابة

CHARGE

CHARGE

CARGAR

CARICA

CARREGAR

AUFLADEN

OPLADEN

OPLAD

LATAUS

LADING

LADDA

ЗАРЯДКА

충전

لشحن