 


WIRELESS  
EARPHONE


SMOKIN'BUDS2  
WIRELESS

PAIR NEW DEVICE :




\*OFF MODE

PAIRING MODE :

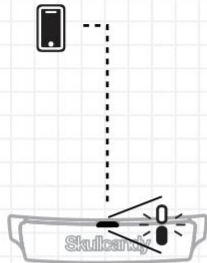

"SB2 WIRELESS"

 POWER-ON/OFF :



VOLUME UP :



VOLUME DOWN :



PLAY / PAUSE



TRACK FORWARD :




TRACK BACK :



ANSWER/END :



CHARGE

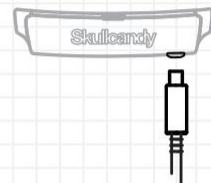

Skullcandy®

PAIR NEW DEVICE \*Off mode

COUPLER NOUVEL APPAREIL\*Mode off

VINCULAR NUEVO DISPOSITIVO\*Modo apagado

ACCOPIA NUOVO DISPOSITIVO\*Modalità spento

EMPARELHAR NOVO DISPOSITIVO\*Modo desligado

MIT NEUEM GERÄT KOPPELN\*Ausgeschalteter Zustand

NIEUW APPARAAT PAREN\*uitmodus

PARDAN NY ENHED\*slukket tilstand

MUODOSTA UUSI LAITEPARI\*off-tila

SAMMENKOBLE NY ENHET\*av-modus

PARA NY ENHET\*av-läge

СОПРЯЖЕНИЕ НОВОГО УСТРОЙСТВА\*В выключенном режиме

配对新设备 \*关机模式

新しいデバイスをペアリング\*オフモード

'새 기기 짝 맞추기\*오프 모드

وضع ايقونة زوجة جوي جديد

PAIRING MODE

MODE COUPLAGE

MODU DE VINCULACIÓN

MODALITÀ DI ACCOPIAMENTO

MODU EMPARELHAMENTO

KOPPELMODUS

PARNUMODUS

PARDANNELGESTVILSTAND

LAITEPARIIN MUODOSTUSTILA

SAMMENKOBLINGSMODUS

PARNINGSLÄGE

РЕЖИМ СОПРЯЖЕНИЯ

配对模式

ペアリングモード

제어링 모드

وضع لاقونة

POWER-ON/OFF

ON/OFF

ACCENDIDO/APAGADO

ACCENSIONE/SPENIMENTO

LIGAR/DESLIGAR

EIN/AUS

AAN-/UITZETTING

SKRU OP FOR LYDSTYRKEN

VIRTA PÄÄLLE/POIS

STRÖM AV/PÅ

STRÖM AV/PÅ

ВКЛЮЧИТЬ/ВЫКЛЮЧИТЬ ПИТАНИЕ

开机/关机

電源 - ON/OFF

전원 켜기/끄기

تشغيل ايقونة

VOLUME UP

VOLUME +

SUBIR VOLUMEN

AUMENTO VOLUME

AUMENTAR O VOLUME

LAUTSTÄRKE ERHÖHEN

VOLUME ÖMSÖG

SKRU OP FOR LYDSTYRKEN

ÄÄNEVOIMAKUUDEN LISÄYS

VOLUM OPP

ÖKA VOLYMEN

УВЕЛИЧЕНИЕ ПРОМКСТИ

音量增大

音量を上げる

볼륨 높이기

رفع مستوى الصوت

VOLUME DOWN

VOLUME -

BAJAR VOLUMEN

RIDUZIONE VOLUME

DIMINUIR O VOLUME

LAUTSTÄRKE SENKEN

VOLUME ÖMLAAG

SKRU NED FOR LYDSTYRKEN

ÄÄNEVOIMAKUUDEN VÄHENYYS

VOLUM NED

SÄNKÄ VOLYMEN

УМЕНЬШЕНИЕ ПРОМКСТИ

音量减小

音量を下げる

볼륨 낮추기

خفض مستوى الصوت

PLAY/PAUSE

LECTURE/PAUSE

REPRODUCIR/PAUSAR

RIPRODUCI/PAUSA

REPRODUCIR/COLOCAR EM PAUSA

WIEDERGABE/PAUSE

AFSPLEEN/PAUSEREN

AFSPIL/PAUSE

TOISTO/TAUPO

SPILL/PAUSE

SPELA UPP/PAUSA

ВОСПРОИЗВЕДЕНИЕ/ПАЗЗА

播放/暂停

再生 / 一時停止

재생 일시 정지

تشغيل ايقونة

TRACK FORWARD

PISTE SUUVANTE

ADELAHTAR

BRANO SUCCESSIVO

FAIXA SEGUINTE

NÄCHSTER TITEL

VOLGEND NUMMER

SKIFT TIL NESTE MUSIKNUMMER

KELAUS ETENPÄIN

NESTE SPOR

BYTA TILL FÖREGÅENDE SPÅR

ПЕРЕКЛЮЧЕНИЕ НА 1 ТРЕК ВПЕРЕД

下一曲目

次のトラックを再生する

다음 트랙으로

مسار الأمام

TRACK BACK

PISTE EDÄLLÄ

RETROCEDER

BRANO PRECEDENTE

FAIXA ANTERIOR

VORANGEHENDER TITEL

VORIG NUMMER

MUSIKNUMMER TILBAGE

KELAUS TAKSEPÄIN

FÖRRIGE SPOR

PEREKLUCHEHIE HA 1 TPEK HAZAD

上一曲目

前のトラックを再生する

이전 트랙으로

مسار الخلف

ANSWER/END

RÉPONDRE/FIN

RESPONDER/COLGAR

RISPOSTA/FINE

ATENDER/DESLIGAR

ANNEHMEN/BEENDEN

BEANTWOORDEN/BEËINDIGEN

BESVAR/AFSLUT

VASTAUS/LOPETUS

SVAR/AVSLUTT

OPBEITVET/ZAKONCHIT

接听/结束

응답 / 끝

전화 받기/끊기

رد الإجابة

CHARGE

CHARGE

CARGAR

CARICA

CARRREGAR

AUFLADEN

OPLADEN

OPLAD

LATAUS

LADING

LADDA

ЗАРЯДКА

充电

充電

충전

لشحن