


UPROAR
WIRELESS

PAIR NEW DEVICE:




*OFF MODE

PAIRING MODE:

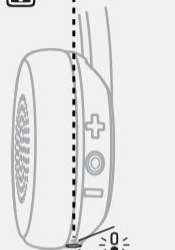


"UPROAR WIRELESS"

POWER-ON/OFF:

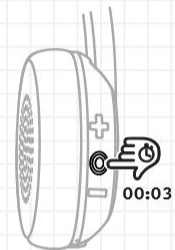


00:03

VOLUME UP:

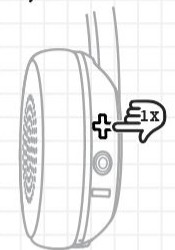


+1X

VOLUME DOWN:

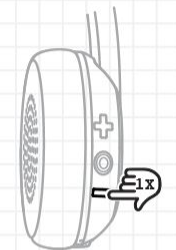


-1X

PLAY/PAUSE

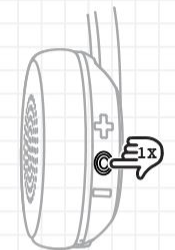


TRACK FORWARD:

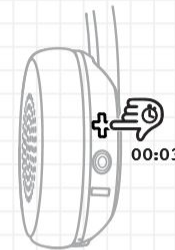


00:03

TRACK BACK:

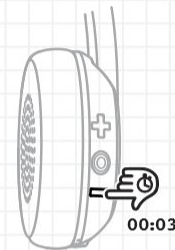


00:03

ANSWER/END:

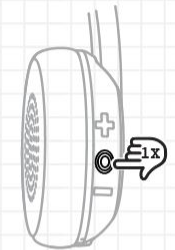

-1X

CHARGE

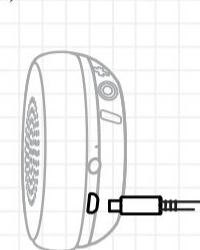

Skullcandy®

PAIR NEW DEVICE *Off mode

COUPLER NOUVEL APPAREIL*Mode off

VINCULAR NUEVO DISPOSITIVO*Modo apagado

ACCOPIA NUOVO DISPOSITIVO*Modalità spento

EMPARELHAR NOVO DISPOSITIVO*Modo desligado

MIT NEUEM GERÄT KOPPELN*Ausgeschalteter Zustand

NIEUW APPARAAT PAREN*uitmodus

PARDAN NY EINHEÐ*slukket tilstand

MUODOSTA UUSI LAITEPARI*Off-tila

SAMMENKOBLE NY EINHET*Av-modus

PARA NY EINHET*Av-läge

СОПРЯЖЕНИЕ НОВОГО УСТРОЙСТВА*В выключенном режиме

配对新设备 *关机模式

新しいデバイスペアリング*オフモード

'새 기기 짝 맞추기*오프 모드

وضع لاقتران مع جهاز جديد

PAIRING MODE

MODE COUPLAGE

MODO DE VINCULACIÓN

MODALITÀ DI ACCOPIAMENTO

MODO EMPARELHAMENTO

KOPPELMODUS

PAARMODUS

PARDANNEIÐGEVSTILSTAND

LAITEPARIIN MUODOSTUSTA

SAMMENKOBLEINGSMODUS

PARNINGSLÄGE

РЕЖИМ СОПРЯЖЕНИЯ

配对模式

ペアリングモード

레이팅 모드

وضع الاقتران

POWER-ON/OFF

ON/OFF

ENCENDIDO/APAGADO

ACCENSIONE/SPERNIMENTO

LIGAR/DESLLGAR

EIN/AUS

ÄÄN-/UITSETTING

SKRU OP FOR LYDSTYRKEN

VIRTA PÄÄLLE/POIS

STRÖM AV/PÅ

STRÖM AV/PÅ

ВКЛЮЧИТЬ/ВЫКЛЮЧИТЬ ПИТАНИЕ

开机/关机

電源 - ON/OFF

전원 켜기/끄기

تشغيل/إيقاف تشغيل

VOLUME UP

VOLUME +

SUBIR VOLUMEN

AUMENTO VOLUME

AUMENTAR O VOLUME

LAUTSTÄRKE ERHÖHEN

VOLUME ÖMHOOG

SKRU OP FOR LYDSTYRKEN

ÄÄNEVOIMAMUKUUDEN LISÄYS

VOLUM OPP

ÖKA VOLYMEN

УВЕЛИЧЕНИЕ ГРОМКОСТИ

音量增大

音량을上げる

볼륨 높이기

رفع مستوى الصوت

VOLUME DOWN

VOLUME -

BAJAR VOLUMEN

RIDUZIONE VOLUME

DIMINUIR O VOLUME

LAUTSTÄRKE SENKEN

VOLUME ÖMLAAG

SKRU NED FOR LYDSTYRKEN

ÄÄNEVOIMAMUKUUDEN VÄHENYYS

VOLUM NED

SÄNKÄ VOLYMEN

УМЕНЬШЕНИЕ ГРОМКОСТИ

音量减小

音량을 lower

볼륨 낮추기

خفض مستوى الصوت

PLAY/PAUSE

LECTURE/PAUSE

REPRODUCIR/PAUSAR

RIPRODUCI/PAUSA

REPRODUSIR/COLOCAR EM PAUSA

WIEDERGABE/PAUSE

AFSPLEEN/PAUSEREN

AFSPIL/PAUSE

TOISTO/TAUKO

SPILL/PAUSE

SPILLA UPP/PAUSA

ВОСПРОИЗВЕДЕНИЕ/ПАУЗА

播放/暫停

再生 / 一時停止

재생/일시 정지

تشغيل/إيقاف مؤقت

TRACK FORWARD

PISTE SUIVANTE

ADELAHTAR

BRANO SUCCESSIVO

FAIXA SEGUINTE

NÄCHSTER TITEL

VORANGEHENDER TITEL

VORIG NUMMER

SKIFT TIL NESTE MUSIKNUMMER

KELAUS ETENPÄİN

NESTE SPOR

BYTA TILL FÖREGÅENDE SPÅR

ПЕРЕКЛЮЧЕНИЕ НА 1 ТРЕК ВПЕРЕД

下一曲目

次のトラックを再生する

다음 트랙으로

مسار الأمام

TRACK BACK

PISTE PRÉCÉDENTE

RETROCEDER

BRANO PRECEDENTE

FAIXA ANTERIOR

VORANGEHENDER TITEL

VORIG NUMMER

MUSIKNUMMER TILBAGE

KELAUS TAKSEPÄİN

FORRIGE SPOR

BYTA TILL FÖREGÅENDE SPÅR

ПЕРЕКЛЮЧЕНИЕ НА 1 ТРЕК НАЗАД

上一曲目

前のトラックを再生する

이전 트랙으로

مسار الخلف

ANSWER/END

RÉPONDRE/FIN

RESPONDER/COLGAR

RIGPOSTA/FINE

ATENDER/DESLIGAR

ANHEMME/BEENDEN

BEANTWOORDEN/BEËINDIGEN

BEGVAR/AFSLUT

VASTAUS/LOPETUS

SVAR/AVSLUTT

SVARA/LÄGG PÅ

ОТВЕТИТЬ/ЗАКОНЧИТЬ

接听/結束

応答 / 終了

전화 받기/끝기

رد الإجابة

CHARGE

CHARGE

CARGAR

CARICA

CARREGAR

AUFLADEN

OPLADEN

OPLAD

LATAUS

LADING

LADDA

ЗАРЯДКА

充電

충전

شحن